

# ~ FABRICATION ~

## OPERATING INSTRUCTIONS



WOOD

INTRODUCING



WOOD

*the*



# WOOD EXTRACTION



### Extraction for the Wood Workshop

Level 1 (see Wood Workshop Induction Guide on Access Levels)

Extraction suction used for collecting wood and plastic dust

#### How to use this extraction system

- Turn on all extractors at the mains by pressing the GREEN button; turn off all extractors using the RED button.
- Check that extraction associated with the machine that is going to be operated is on.
- Check the valve is OPEN.
- Direct the extraction towards the area where the dust is being produced.
- Make sure the extractor is doing its job simply by placing you hand over it to see if there is suction.
- Never turn off the extraction in the wood workshop if the CNC sign is on the control box. Extraction must be on constantly when the CNC machine is in operation.
- It's important to use extraction because allergic reaction to wood dust can cause short-term inflammation to mucous membranes; tear ducts, inner ears, inside of lips and nose (acute illness)
- Exposure to wood dust presents hazard to long-term user health - asthma and, if severe enough, cancer (chronic illness)

Date

I verify that I have read and understood the information detailed within this document

Name

Signature